



## Christmas Tree Sku # 000 000

### Operation

#### Turning on the tree

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

Step 1. Connect the light strings of the tree together and plug the power cord into a wall outlet.

Step 2. If the tree comes with a foot pedal, step on the On/Off button.

### Maintenance

#### Spare parts

This tree package includes hinge pins, washers, bulbs and fuses for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 9 am and 5 pm EST, Monday through Friday.

#### Repairing Loose Hinges

Step 1. Place the branch into the slot of the bracket.

Step 2. Insert a new hinge pin through the holes of the bracket and secure with a washer.

### Care and Cleaning

Step 1. Remove all ornaments and decorations.

Step 2. Unplug the cord from the wall and then unplug each section of the tree.

Step 3. Gently lift the tree top straight up to remove from the center sections and fold all branches towards the pole.

Step 4. Repeat this step for the bottom tree section.

Step 5. Carefully place all tree sections into a shipping box and tape it shut.

Step 6. Store your tree in a cool, dry place away from sunlight.

### Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.
	Check for blown fuses at the power cord plug. Replace as needed with the replacement fuses provided.
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided.